
MANSONRY SAW (TBS-350E) EXPLODED DRAWING

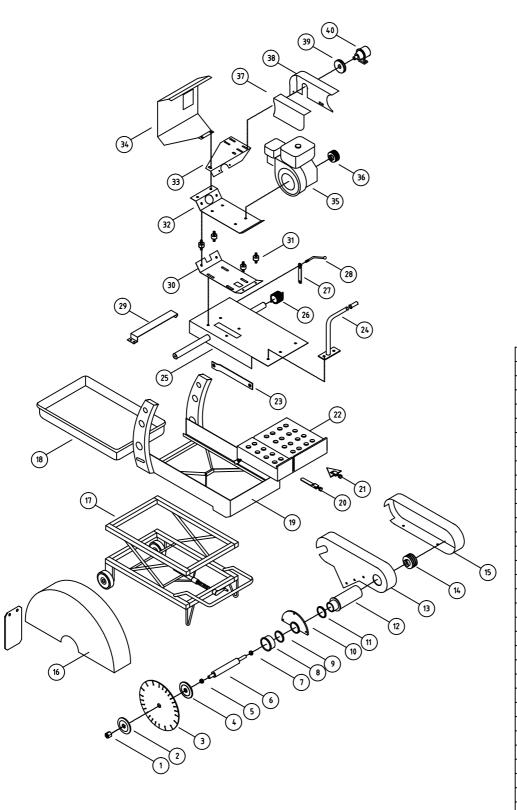

40 WATER PUMP 39 PUMP PULLEY 38 OUTER BELT COVER 37 INNER BELT COVER 36 ENGINE PULLEY 35 ENGINE 34 STOPPER 33 PUMP BRACKET 32 ENGINE MOUNTING 31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING 25 MOUNTING	
38 OUTER BELT COVER 37 INNER BELT COVER 36 ENGINE PULLEY 35 ENGINE 34 STOPPER 33 PUMP BRACKET 32 ENGINE MOUNTING 31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
37 INNER BELT COVER 36 ENGINE PULLEY 35 ENGINE 34 STOPPER 33 PUMP BRACKET 32 ENGINE MOUNTING 31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
36 ENGINE PULLEY 35 ENGINE 34 STOPPER 33 PUMP BRACKET 32 ENGINE MOUNTING 31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
35 ENGINE 34 STOPPER 33 PUMP BRACKET 32 ENGINE MOUNTING 31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
34 STOPPER 33 PUMP BRACKET 32 ENGINE MOUNTING 31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
33 PUMP BRACKET 32 ENGINE MOUNTING 31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
32 ENGINE MOUNTING 31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
31 RUBBER MOUNTING 30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
30 MOUNTING PLATE 29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
29 BRACKET 28 HANDLE 27 BAR 26 SPRING	
28 HANDLE 27 BAR 26 SPRING	
27 BAR 26 SPRING	
26 SPRING	_
25 MOUNTING	
	_
24 HANDLE	
23 CONNECTOR	_
22 TABLE	_
21 DUAL 45° FLAT ANGLE GUID	Œ
20 PARALLET GUIDE	_
19 FRAME	_
18 TRAY	_
17 ADJUSTBLE TABLE	_
16 BLADE COVER	_
15 OUTER BELT COVER	_
14 BLADE PULLEY	_
13 INNER BELT COVER	_
12 BEARING HOUSING	_
11 COLLAR	_
10 COVER BRACKET	_
9 COLLAR	_
8 BUSH	_
7 BEARING	_
6 BLADE SHAFT	_
5 BEARING	_
4 BLADE SUPPORT FLANGE B	_
3 BLADE	_
2 BLADE SUPPORT FLANGE A	_
1 BLADE NUT	_
REF DESCRIPTION	_